 


68-530 Remove and install cover at weatherstrip (coupe)

Special tool

Caulking tool




123 589 01 59 00

Remove


1 By means of a sharp-edged plastic wedge, press cover off the weatherstrip.

Note: The cover is damaged during removal so that it must always be replaced.

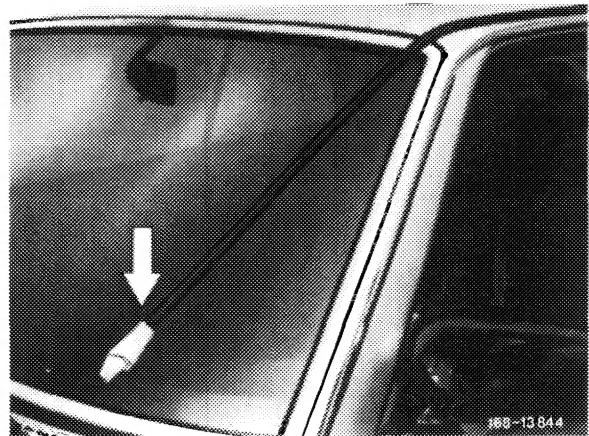

Install

2 Attach cover at the front with masking tape in order to avoid damage to the vehicle surface.

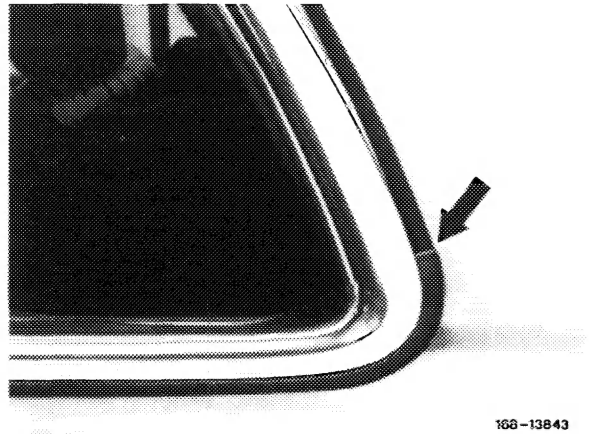

3 Starting at the rear, knock cover onto the weatherstrip by means of the caulking tool.

